

# VIDEX

USER

INSTRUCTIONS




## VK6N


VXWWD10054VK6

## ANSWERING THE DOOR

The phone will ring and the monitor will switch on.

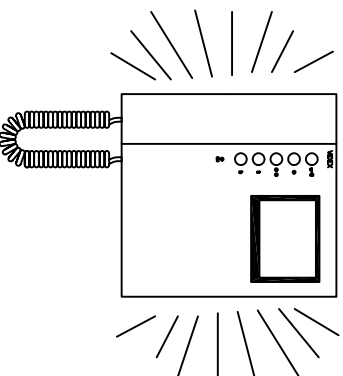

When you pick up the handset you may talk to the caller. You may then either press the lock button to open the door or hang up.

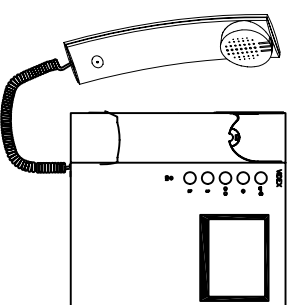

## CALLING THE PICTURE

When calling the picture, the handset does not need to be lifted.

Simply press the single dot button once.

The picture will appear and stay for approx. one minute.

